

PZ Series Load Sensitive Variable Piston Pump

2.13 to 13.42 cu in/rev
3045 psi

Features

- 1 The PZ Series load sensitive variable piston pump employs the semi-cylindrical swash plate that is part of the basic technology used by the PVS series variable piston pump. To this it adds a hydrostatic bearing mechanism, valve plate, and other noise reducing mechanisms for operation that is even quieter than that of PVS Series pumps.
- 2 The pump body houses an electro-hydraulic proportional control valve, compensator, and surge cutoff valve, which eliminates the need for superfluous piping.
- 3 The electro-hydraulic proportional control valve uses the proven force feedback system for improved hysteresis, repeatability, and response.
- 4 The ability to create a double pump configuration with an IP pump further expands the range of possible applications.

Specifications

Pump System Specifications

Model No.	Pump Capacity cu in/rev	Maximum Working Pressure psi	Pressure Adjustment Range psi	Flow Control Limit Range gpm Note 3	Revolution Speed min ⁻¹		Weight lbs	Fixed Discharge Pump Note 1	
					Min.	Max.		Capacity cu in/rev	Pressure psi
PZ-2B-*- 35E1A-11 2 3	2.13	3045	290 to 1000 290 to 2000 290 to 3000	.26 to 16.6	600	2000	79	3.6 to 8.18	3000
PZ-2B-*- 45E1A-11 2 3	2.74	2030	290 to 2000 290 to 3000	.26 to 21	600	2000	79	3.6 to 8.18	3000
PZ-3B-*- 70E1A-10 2 3	4.27	3045	290 to 1000 290 to 2000 290 to 3000	.26 to 33	600	1800	132	3.6 to 15.8	3000
PZ-4B-*-100E1A-10 2 3	6.10	3045	290 to 1000 290 to 2000 290 to 3000	.26 to 47.5	600	1800	167	3.6 to 15.8	3000
PZ-5B-*-130E1A-10 2 3 (Note 2)	7.93	3045	290 to 1000 290 to 2000 290 to 3000	.79 to 61.8	600	1800	220	3.6 to 32.3	3000
PZ-6B-*-180E1A-20 2 3	10.98	3045	290 to 1000 290 to 2000 290 to 3000	.79 to 85.6	600	1800	353	3.6 to 63.9	3000
PZ-6B-*-220E1A-20 2 3	13.42	3045	290 to 1000 290 to 2000 290 to 3000	.79 to 87.1	600	1500	357	3.6 to 63.9	3000

Note 1: Can be used in combination with an IP pump to configure a fixed discharge pump.

Note 2: The PZ-4B-130 model number was changed to PZ-5B-130.

Note 3: Maximum flow rate depends on the revolution speed. Values in the above table are for a speed of 1800min⁻¹ for the PZ-2B to PZ-6B-180, and 1500min⁻¹ for the PZ-6B-220.

Pressure/Flow Rate Control System Specifications Pressure Control System

Pressure Control Range psi	.26 to 1000 .26 to 2000 .26 to 3000
Rated Current mA	800
Coil Resistance Ω	20 (20° C)
Hysteresis %	3% max. Note 1

Flow Rate Control System


Valve Differential Pressure	145 Note 2
Rated Current mA	800
Coil Resistance Ω	20 (20° C)
Hysteresis %	3% max. Note 1

Note 1. Value when a Nachi-Fujikoshi special amplifier is used (with dithering).


Note 2. Pressure differential of pump discharge pressure (valve IN side) and load pressure (valve OUT side).

Note 3. For information about power amplifiers, see pages G-26 through G-37.


PZ-2B/3B/5B

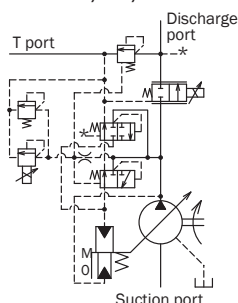


PZ-4B-100

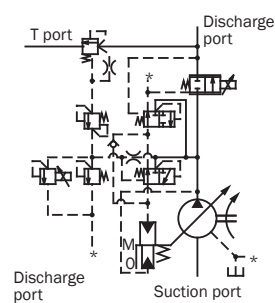

PZ-6B

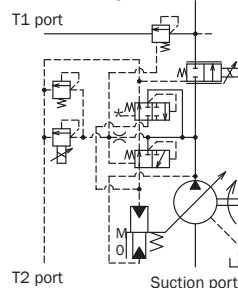

Understanding Model Numbers

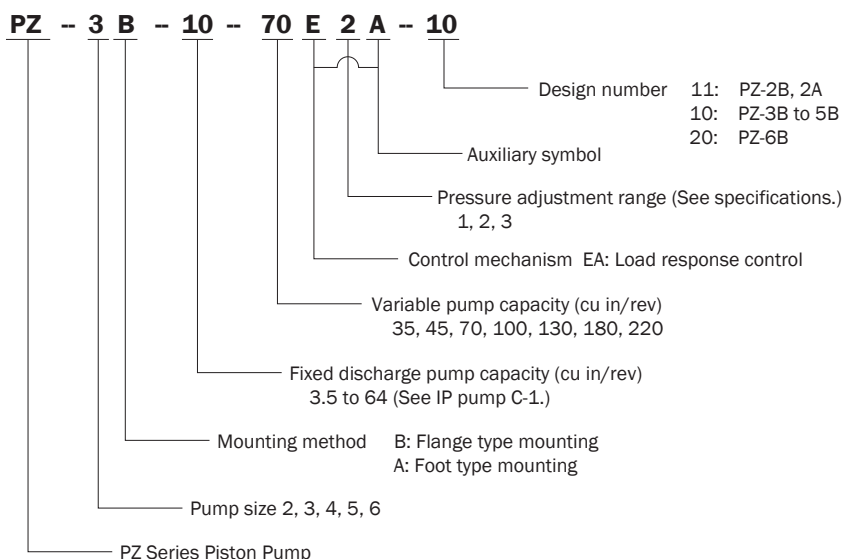

- Handling
- Pump Installation and Piping Precautions

- Use flexible couplings for connecting the pump shaft to the drive shaft, and prevent radial or thrust load from being applied to the pump shaft.
- Eccentricity between the drive shaft and pump shaft should be no greater than 0.01 in, with an eccentric angle error of 1° or less.
- Keep the clamping length of couplings and pump shafts at least 2/3 the length of the coupling width.
- Use a sufficiently rigid pump mounting base.
- Set pump suction side pressure to -4 psi or more (suction port flow velocity less than 6 ft/sec).
- Raise part of the drain piping so it is above the topmost part of the pump body, and insert the return section of the drain piping into the hydraulic operating fluid. Also, observe the values in the following table in order to limit the drain back pressure to 14.5 psi.

Item Model No.	PZ-2B	3B PZ-4B 5B	PZ-6B
Pipe Joint Size	At least 1/2"	At least 3/4"	At least 1"
Pipe I.D.	1/2"	5/8"	7/8"
Pipe Length	1 m or less	1 m or less	1 m or less

- Mount the pump so the pump shaft is oriented horizontally.
- Use of rubber hose is recommended in order to minimize noise and vibration.

- Management of Hydraulic Operating Fluid

- Use only good-quality hydraulic operating fluid with a kinematic viscosity during operation within the range of 20 to 200 centistokes.
Normally, you should use an R&O type and wear-resistant type of ISOVG32 to 68 or equivalent.
The optimum kinematic viscosity during operation is 20 to 50 centistokes.
- The operating temperature range is 41 to 140°F. When the oil temperature at startup is 41°F or less, run the pump at low pressure until the oil temperature reaches 40°F.
- Provide a suction strainer with a filtering grade of about 100μ (150 mesh). Provide a return line filter of grade 10μm or less on the return line to the tank. (When the pump is used at a high pressure of 2000 psi or greater, a filter of 10μm or less is recommended.)
- Manage hydraulic operating fluid so contamination is maintained at class NAS10 or lower.
- Use hydraulic operating fluid when the operating ambient temperature is in the range of 32 to 140°F.

- Startup Precautions

- Before starting up the pump, fill the pump body with clean hydraulic operating fluid through the lubrication port.

Model No.	Oil Amount cu in
PZ-2B	39
PZ-3B	61
PZ-4B	110
PZ-5B	134
PZ-6B	183



- Check to make sure that the rotation direction of the pump is the same as the rotation direction indicated by the arrow on the pump body.
- Air entering the pump or pipes can cause noise or vibration. At startup, set the pump discharge side to a no-load state, and operate the pump in the inching mode to remove any air that might be in the pump or pipes.
- Equip an air bleed valve in circuits where it is difficult to release air before startup. (See "IP Pumps" on page C-13.)
- To enable superior pressure and flow control, loosen the air vent when starting up the pump in order to release any air, and fill the inside of the solenoid with hydraulic operating fluid. You can change the position of the air vent by rotating its cover.
- Before adjusting the manual adjusting screw from the first time or when there is no input current to the valve due to electrical malfunction or some other reason, you can control pump pressure and flow rate by rotating the manual adjusting screw. Normally, the manual adjusting screw should be returned completely to its original position and secured with the lock nut.

2 Bolt SAE B Mount

Technical drawing of the 4-1/2 inch Code 61 hydraulic valve assembly. The drawing shows a side view of the valve with various ports and adjustment screws. Key dimensions include a total width of 425, a main body width of 222, and a discharge port diameter of 23. The drawing also shows the location of the manual pressure and flow rate adjusting screws, air vents, and the T port. A note indicates that the key width is 6.3 with a tolerance of +0.015/-0.010.



Labels and dimensions:

- Connecting cord diameter $\phi 8$ to 10
- Manual pressure adjusting screw
- Air vent
- T port 3/8 BSPT
- Relief valve pressure adjusting screw
- 184
- Lubrication port
- 88
- 60
- 6
- Drain port 1/2 BSPT
- Manual flow rate adjusting screw
- Air vent
- 66
- 22
- 4-M10x16
- Discharge port $\phi 23$
- 1" Code 61
- 47.5
- (Suction port 15 position dimension)
- 222
- 425
- 53
- 38
- 3
- Key width 6.3 $+0.015/-0.010$
- Note: $\phi 10.16 \pm 0.051$
- 58.7
- 4-M10x16
- Note
- Single Port

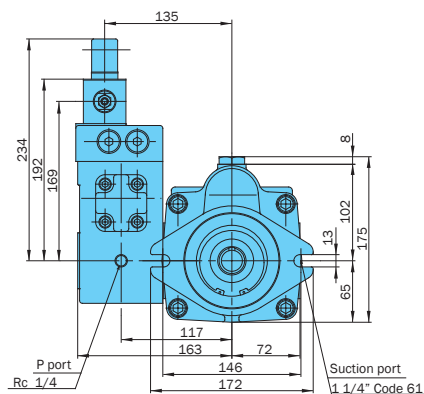
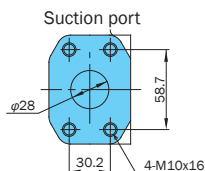


	a	b
Single Pump	$\varphi_{25.223}^0$ -0.021	24.9 -0.5
Double Pump with Fixed Flow IP	$\varphi_{25.385}^0$ -0.025	27.85 -0.25

4 Bolt SAE E Mount

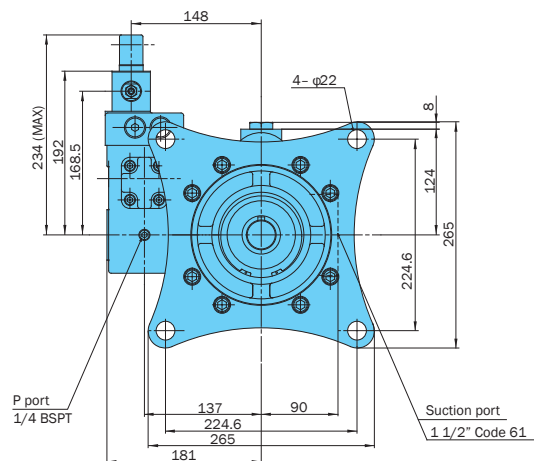
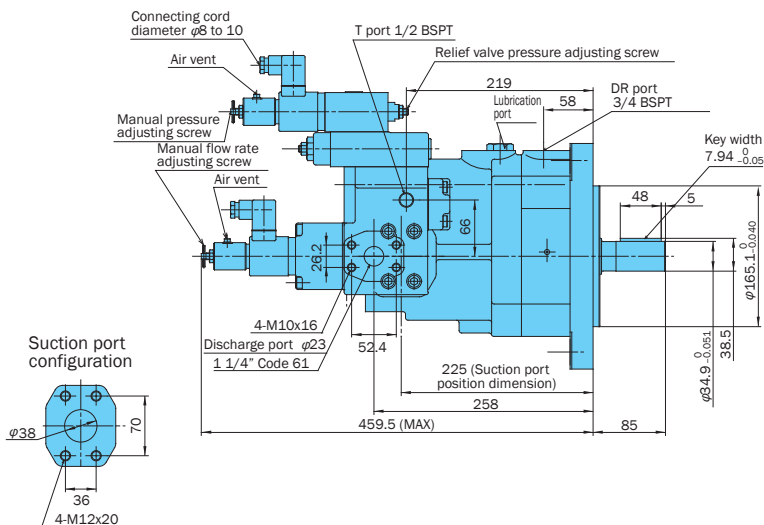


4 Bolt SAE D Mount

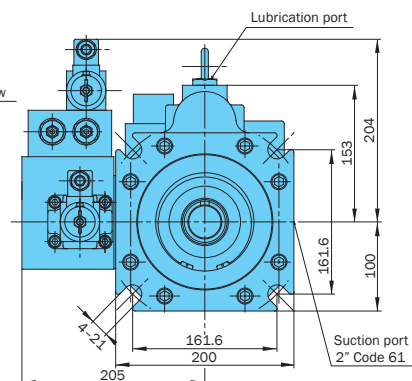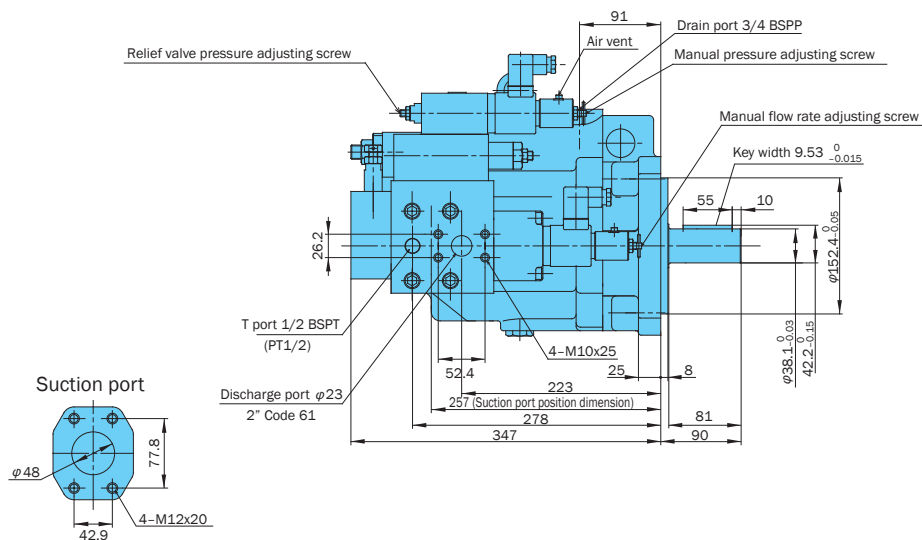


PZ-5B-130

4 Bolt SAE E Mount

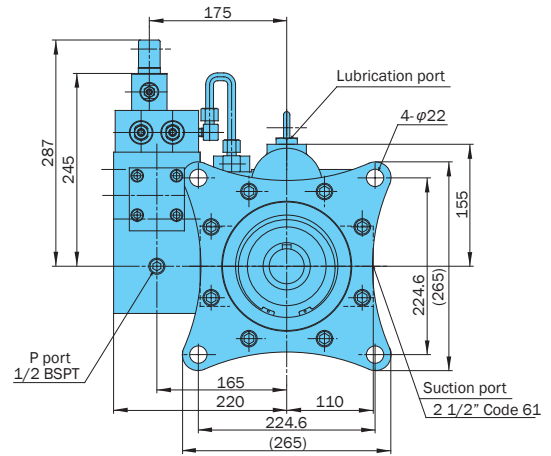
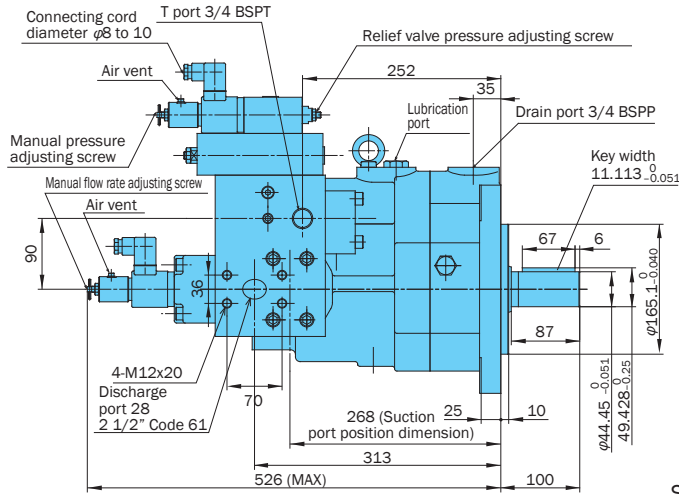


Suction port

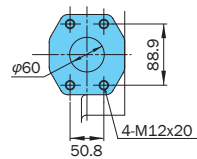


PZ-6B-180
220

4 Bolt SAE E Mount

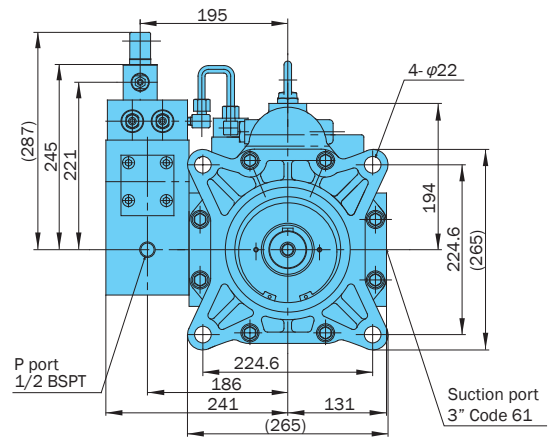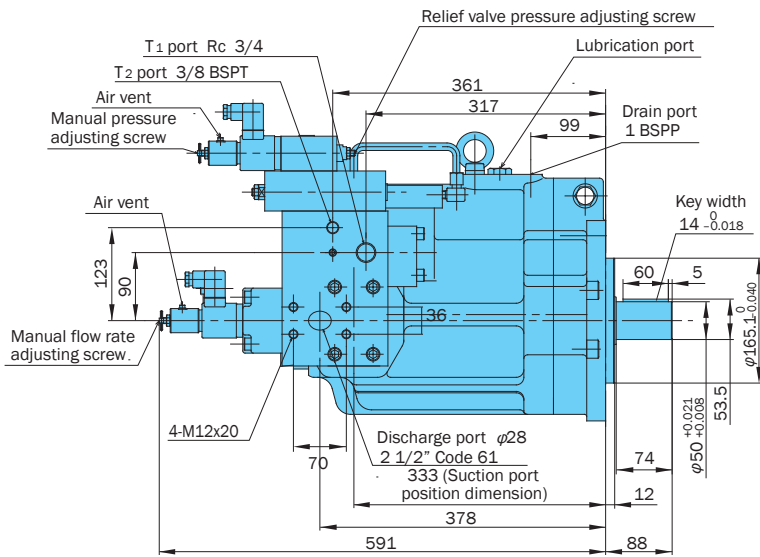






Suction port

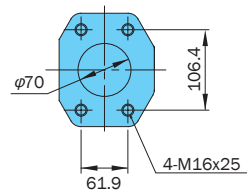


Performance Curves

Typical characteristics at hydraulic operating fluid kinematic viscosity of 32 centistokes








Input Current - Discharge Rate Characteristics

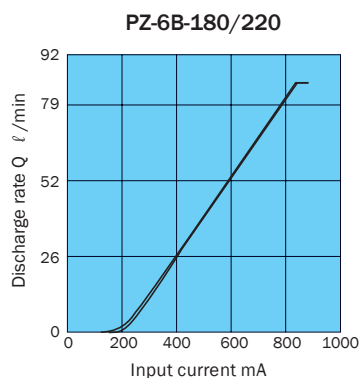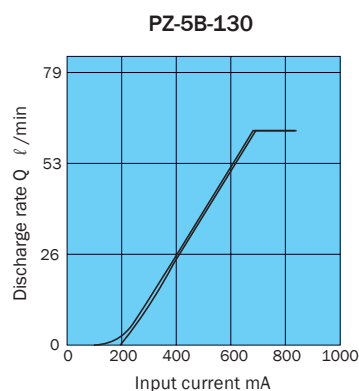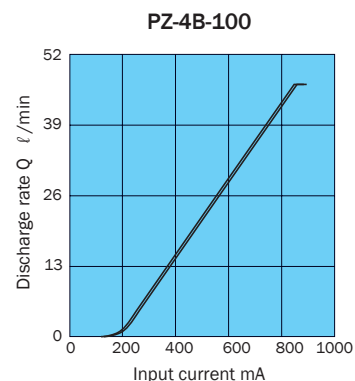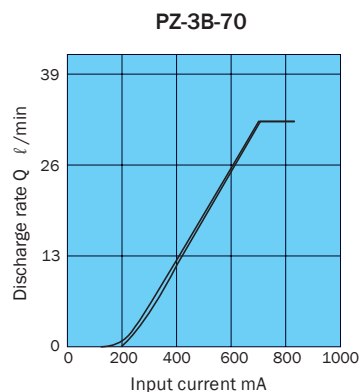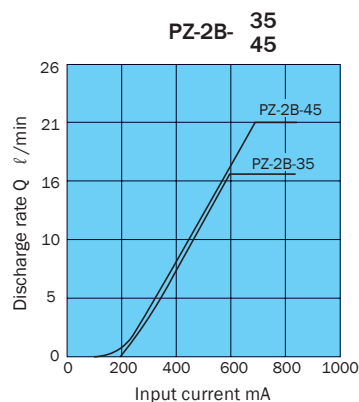

Input Current-Discharge Pressure Characteristics

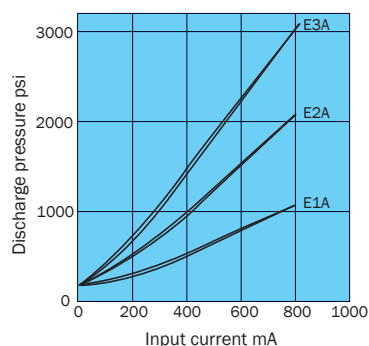


General Performance

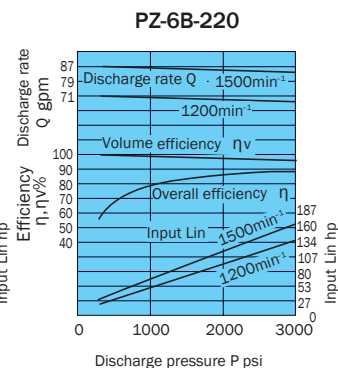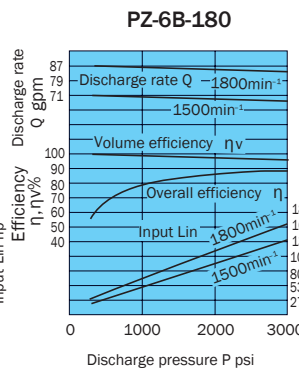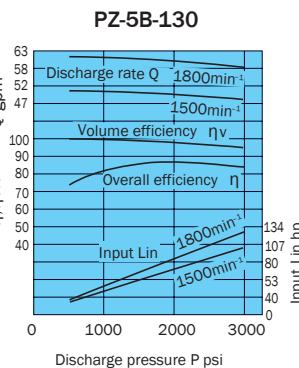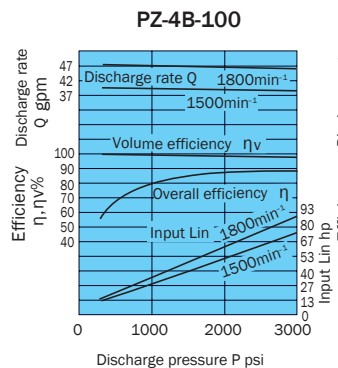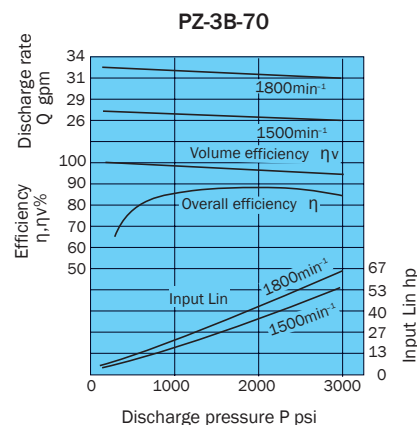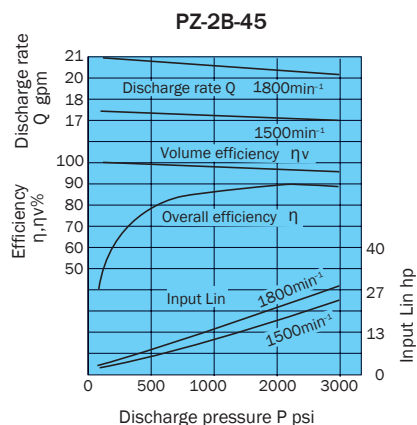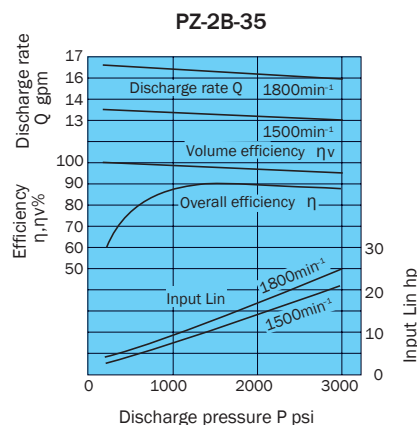

Cross-Sectional Drawing

PZ-2B-³⁵₄₅E*A-11

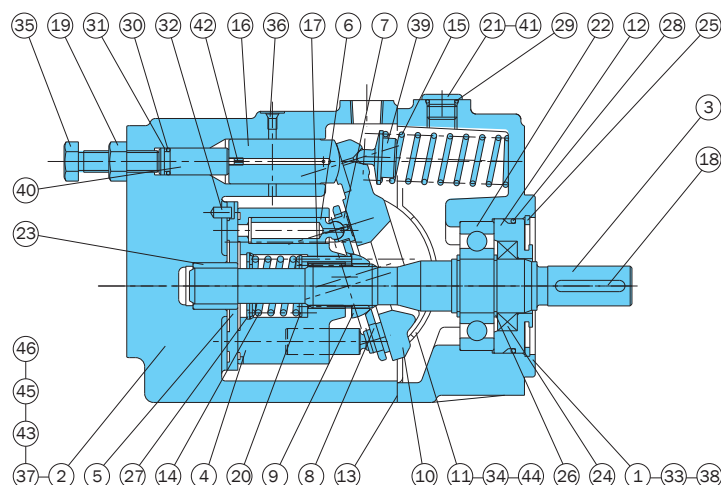


Part No.	Part Name	Part No.	Part Name
1	Body	24	Oil seal
2	Case	25	Snap ring
3	Shaft	26	Snap ring
4	Cylinder barrel	27	Snap ring
5	Valve plate	28	O-ring
6	Piston	29	O-ring
7	Shoe	30	O-ring
8	Shoe holder	31	Backup ring
9	Barrel holder	32	Pin
10	Swash plate	33	Screw
11	Thrust bush	34	Screw
12	Seal holder	35	Screw
13	Gasket	36	Plug
14	Spring C	37	Plug
15	Spring S	38	Plug
16	Control piston	39	Spring holder
17	Needle	40	Guide
18	Key	41	Hydraulic fluid input seal
19	Nut	42	Orifice
20	Retainer	43	Pin
21	Plug	44	Orifice
22	Ball bearing	45	Connector
23	Needle bearing	46	O-ring

List of Sealing Parts (Kit Model Number PSBS-102220)

Part No.	Part Name	Q'ty	Size	Remarks
* 13	Gasket	1	PS46-102000-0A	3 Bond
24	Oil seal	1	TCN-305011	N. O. K
28	O-ring	1	1B-G70	JIS B 2401
29	O-ring	1	1B-P14	JIS B 2401
30	O-ring	1	1B-P11	JIS B 2401
31	Backup ring	1	T2-P11	JIS B 2407
46	O-ring	2	1B-P5	JIS B 2401

Parts marked by an asterisk "*" are not available on the market. Consult your agent.

PZ-3/5B-*E*A-10

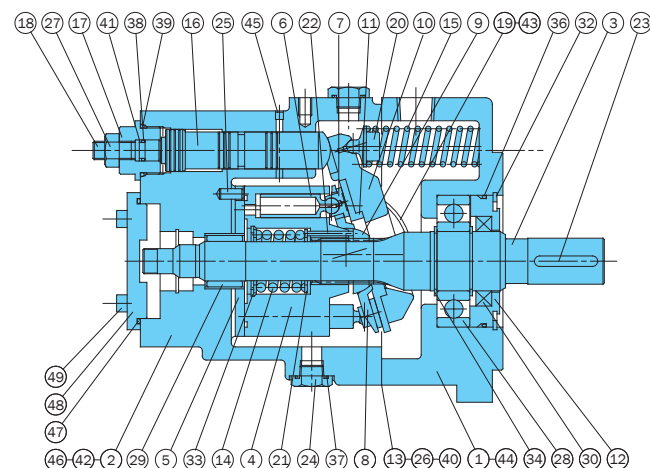


Part No.	Part Name	Part No.	Part Name	Part No.	Part Name
1	Body	18	Guide screw	37	O-ring
2	Case	19	Thrust bush	38	O-ring
3	Shaft	20	Spring holder	39	O-ring
4	Cylinder barrel	21	Retainer	40	O-ring
5	Valve plate	22	Needle	41	Backup ring
6	Piston	23	Key	42	Bolt
7	Shoe	24	Plug	43	Screw
8	Shoe holder	25	Pin	44	Plug
9	Barrel holder	26	Connector	45	Plug
10	Swash plate	27	Nut	46	Pin
11	Thrust plate	28	Ball bearing	47	O-ring
12	Seal holder	29	Needle bearing	48	Plate
13	Gasket	30	Oil seal	49	Screw
14	Spring C	32	Snap ring		
15	Spring S	33	Snap ring		
16	Control piston	34	Snap ring		
17	End plug	36	O-ring		

List of Sealing Parts (Kit Model Number 3B; PZAS-103200, 5B; PZAS-104000)

Part No.	Part Name	PZ-3B		PZ-5B		Remarks
		Size	Q'ty	Size	Q'ty	
13	Gasket	*	1	*	1	3 Bond
30	Oil seal	TCN-456812	1	TCN-608212	1	N. O. K
36	O-ring	1B-G95	1	1B-G125	1	JIS B 2401
37	O-ring	1B-P21	2	1B-P21	2	JIS B 2401
38	O-ring	1B-P12	1	1B-P16	1	JIS B 2401
39	O-ring	1B-P34	1	1B-P42	1	JIS B 2401
40	O-ring	1B-P7	2	1B-P7	2	JIS B 2401
41	Backup ring	T2-P12	1	T2-P16	1	JIS B 2407
47	O-ring	1B-G90	1	1B-G85	1	JIS B 2401

Parts marked by an asterisk "*" are not available on the market. Consult your agent.

PZ-4/6B-*

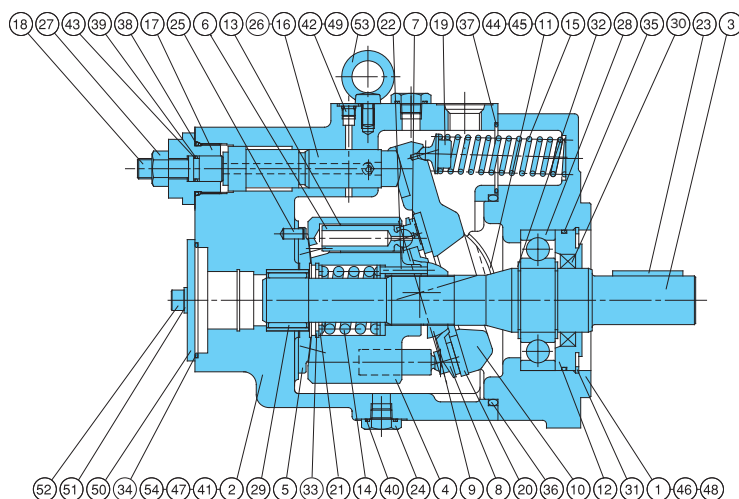

Part No.	Part Name	Part No.	Part Name
1	Body	31	Snap ring
2	Case	32	Snap ring
3	Shaft	33	Snap ring
4	Cylinder barrel	34	O-ring
5	Valve plate	35	O-ring
6	Piston	36	O-ring
7	Shoe	37	O-ring
8	Shoe holder	38	O-ring
9	Barrel holder	39	O-ring
10	Swash plate	40	O-ring
11	Thrust bush	41	O-ring
12	Seal holder	42	O-ring
13	Sleeve	43	Backup ring
14	Spring C	44	Orifice
15	Spring S	45	Screw
16	Control piston	46	Plug
17	End plug	47	Pin
18	Guide screw	48	Bolt
19	Spring holder	49	Plug
20	Thrust plate	50	Plate
21	Retainer	51	Washer
22	Needle	52	Bolt
23	Key	53	Eye bolt
24	Plug	54	Electro-hydraulic proportional valve
25	Pin		
26	Orifice		
27	Nut		
28	Ball bearing		
29	Needle bearing		
30	Oil seal		

List of Sealing Parts (Kit Model Number 4B : PZAS-104100, 6B : PZBS-106000)

Part No.	Part Name	PZ-4B		PZ-6B		Remarks
		Size	Q'ty	Size	Q'ty	
30	Oil seal	TCN-507212	1	TCN-659013	1	N. O. K
34	O-ring	1B-G85	1	1B-G85	1	JIS B 2401
35	O-ring	1B-G105	1	1B-G135	1	JIS B 2401
36	O-ring	1B-G155	1	1B-G200	1	JIS B 2401
37	O-ring	1B-G50	1	1B-G65	1	JIS B 2401
38	O-ring	1B-P36	1	1B-P41	1	JIS B 2401
39	O-ring	1B-P16	1	1B-P16	1	JIS B 2401
40	O-ring	1B-P21	3	1B-P21	3	JIS B 2401
41	O-ring	1B-P9	1	1B-P10	1	JIS B 2401
42	O-ring	1B-P8	5	1B-P8	8	JIS B 2401
43	Backup ring	T2-P16	1	T2-P16	1	JIS B 2407

Foot Mounting Kit

Pump Model No.	Mounting Model No.
PZ-2B	IHM-44-10
PZ-3B	
PZ-5B	IHM-55-10
PZ-6B	
PZ-4B	PZM-4-10

Note: See pages C-12 and A-34 for information about mounting methods.

Piping Flange Kit

Flange Kit model No.	Applicable Pump Model No.	IN Flange							
		Flange Part No.		Bolt		Washer		O-ring	
IHF -4-T-20	PZ-2B-35/45	IH03J-100100	1	TH-10 × 55	4	WS-B-10	4	1B-G40	1
IHF -5-T-20	PZ-3B-70	IH03J-100120	1	TH-12 × 55	4	WS-B-12	4	1B-G50	1
PZF -4-T-10	PZ-4B-100	IH03J-100160	1	TH-12 × 60	4	WS-B-12	4	1B-G60	1
IHF -7-T-10	PZ-5B-130	IH03J-100200	1	TH-12 × 60	4	WS-B-12	4	1B-G75	1
PZF -6-T-10	PZ-6B-180/220	IH03J-100240	1	TH-16 × 75	4	WS-B-16	4	1B-G85	1

	OUT Flange							Plug		
	Flange Part No.		Bolt		Washer		O-ring			
	IH03J-100060	1	TH-10 × 50	4	WS-B-10	4	1B-G30	1	TPHA-1/4	1
	IH03J-100080	1	TH-10 × 50	4	WS-B-10	4	1B-G35	1	TPHA-1/4	2
	IH03J-100080	1	TH-10 × 50	4	WS-B-10	4	1B-G35	1	TPHA-1/4	1
	IH03J-100120	1	TH-12 × 60	4	WS-B-12	4	1B-G50	1	TPHA-1/4	1
	IH03J-100120	1	TH-12 × 60	4	WS-B-12	4	1B-G50	1	TPHA-1/4	1

- Note
1. See page C-11 for dimensions.
 2. O-ring 1B/B-** refers to JIS B2401-1B.
 3. See page C-11 for details on tightening torque.