



Flow Regulator Modular Valve

13.2 to 79 gpm
3625 to 5075 psi

Features

This modular valve is used to control actuator speed and for other flow control valve applications.

A wide range of models are available for A and B port control, A or B port control, and P or T port control.

Maximum Operating Pressure: 3625, 5075 psi

Specifications

Model No.	Nominal Diameter (Size)	Maximum Working Pressure psi	Maximum Flow Rate gpm	Pressure Adjustment Range psi	Weight lbs	Gasket Surface Dimensions
OY-G01-T-20	1/8	3625	50	-	2.2	ISO 4401-03-02-0-94
OCY-G01-P-20				5.7	2.2	
OCY-G01-W-X-20				11.4	2.8	
A B					2.6	
OCY-G01-W-Y-20				11.4	2.8	
A B					2.6	
OCY-G03-P-J50	3/8	3625	100	5.7	6.4	ISO 4401-05-04-0-94
OCY-G03-W-X-J51				14.3	6.8	
A B					6.6	
OCY-G03-W-Y-J51				14.3	6.8	
A B					6.6	
OYH-G04-P-10	1/2	5075	300	5.7	10.3	ISO 4401-07-06-0-94
OYH-G04-W-X-10				14.3	14.3	
A B					14.3	
OYH-G04-W-Y-10				14.3	14.3	
A B					14.3	


• Handling

- 1 In a 03 size application where control differential pressure is large, use of an H type makes adjustment easier.
- 2 Note that a sub plate and installation bolts are not included. See pages H4 and F87-89 if these items are required.
- 3 O4 series modular valves do not have an L (DR2) drain port, so they cannot be used in combination with pressure center type solenoid valves (D).

Understanding Model Numbers

01, 03 size


OCY - G 03 - W - (H) Y - (K) - J51

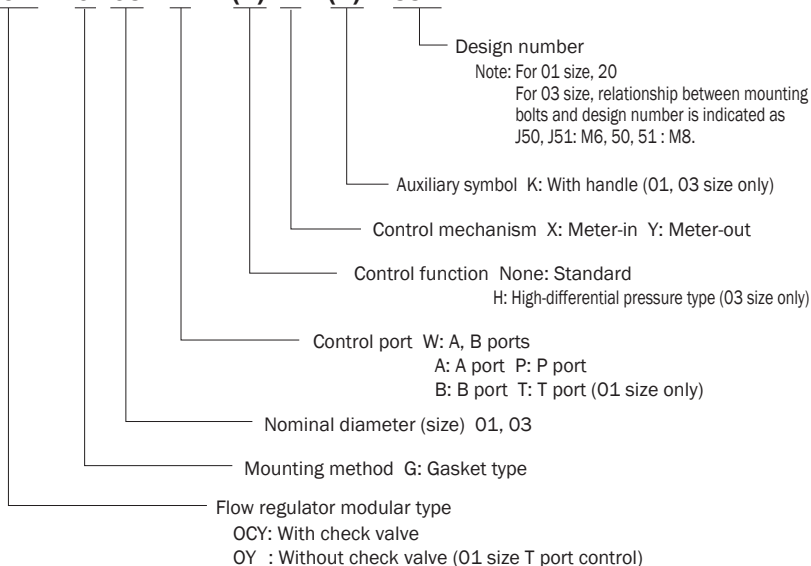

Understanding Model Numbers

04 size


OYH - G 04 - W - Y - 10

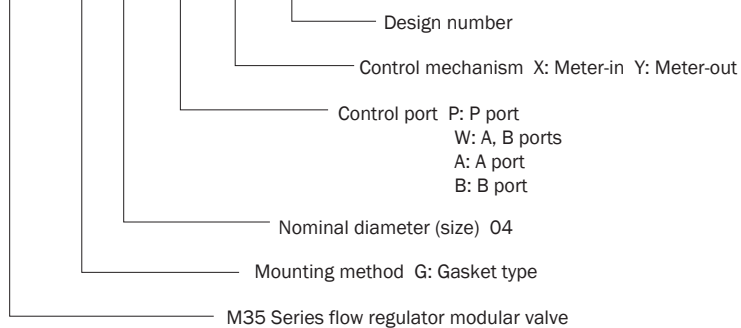


Installation Dimension Drawings

Note: The control flow rate is increased by counter clockwise (leftward) rotation of the adjusting screw.


OY-G01-T-20

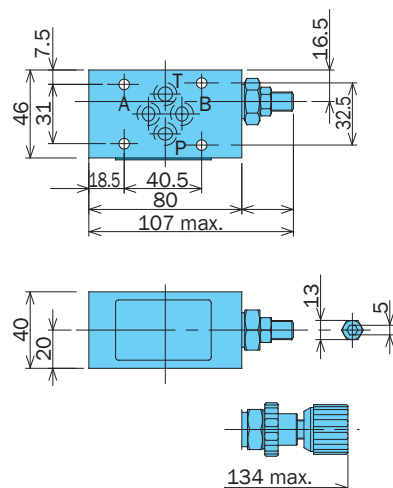


OCY-G01-P-20

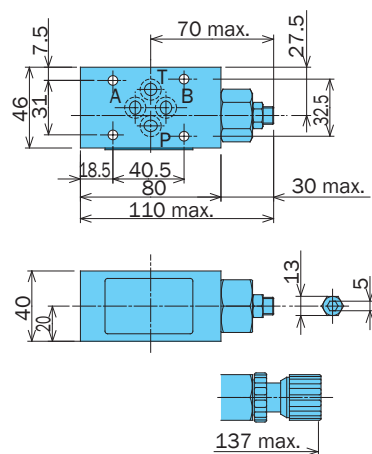


OCY-G01-W-X-Y-20

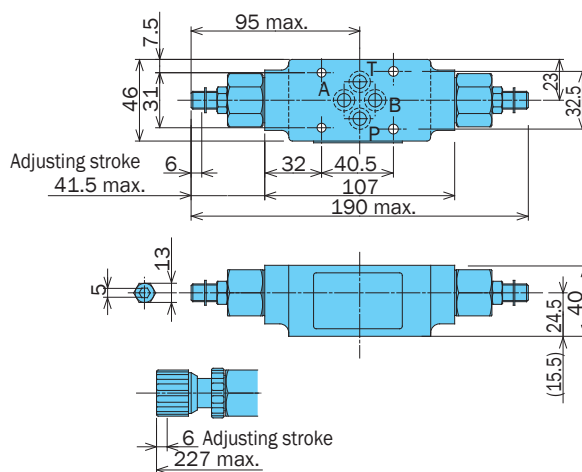

Note: Dimensions in the parentheses are for the OCY-G01-W-X-20.


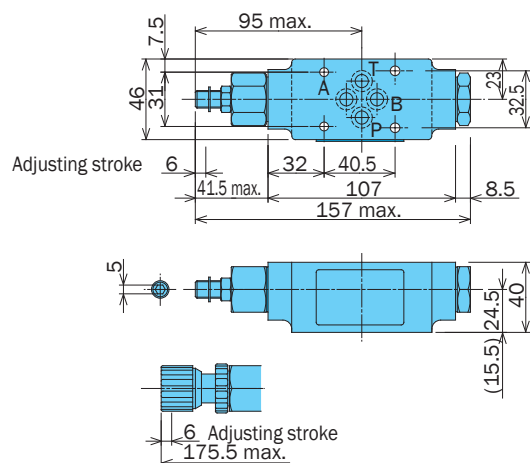
OCY-G01-A-
X
Y-20

Note:
Dimensions in the parentheses are for the OCY-G01-A-X-20.

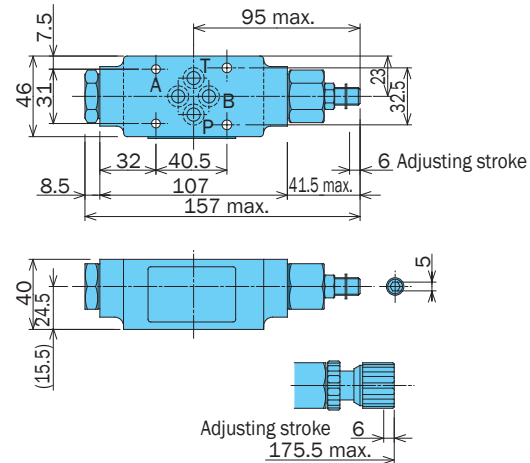
OCY-G01-B-
X
Y-20

Note:
Dimensions in the parentheses are for the OCY-G01-B-X-20.


OCY-G03-P-J50

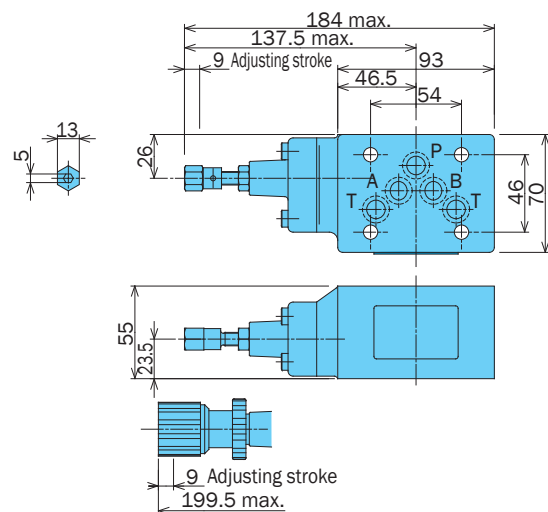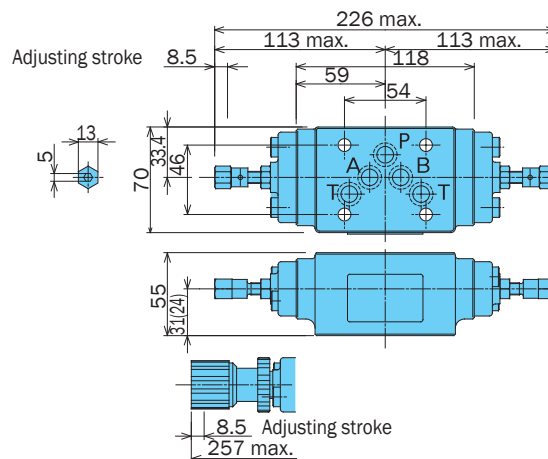OCY-G03-W-
X
Y-J51

Note:
Dimensions in the parentheses are for the OCY-G03-W-X-J51.

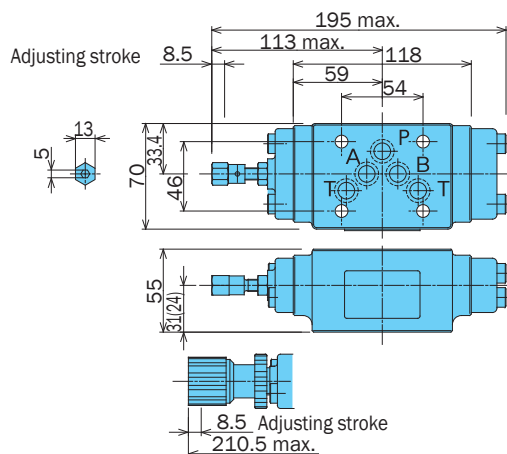
OCY-G03-A-
X
Y-J51

Note:
Dimensions in the parentheses are for the OCY-G03-A-X-J51.

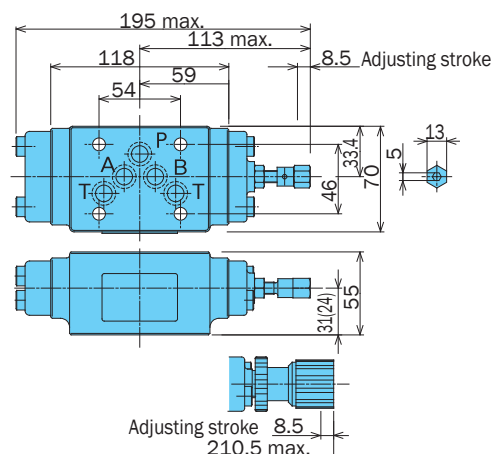
OCY-G03-B-
X
Y-J51

Note:
Dimensions in the parentheses are for the OCY-G03-B-X-J51.


OYH-G04-P-10

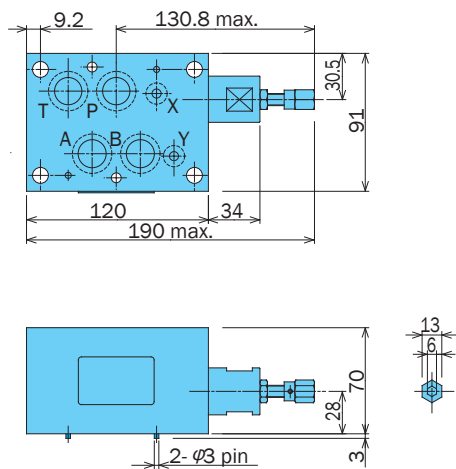


OYH-G04-W-
X
Y-10

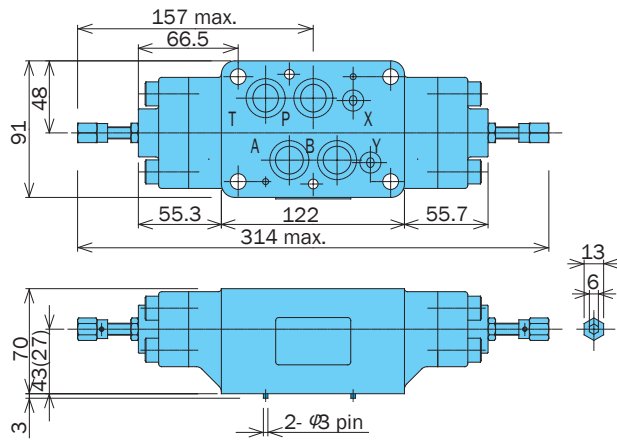

OYH-G04-A-
X
Y-10

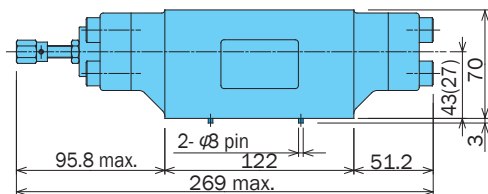

OYH-G04-B-
X
Y-10

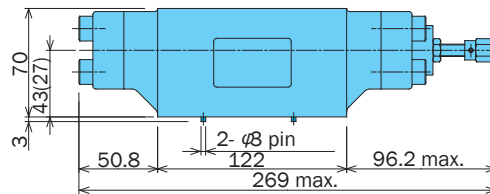


Note: Dimensions in the parentheses are for the OYH-G04-*X-10.

Performance Curves


Hydraulic Operating Fluid Viscosity 32 centistokes

Pressure Loss Characteristics


OY-G01-T-20

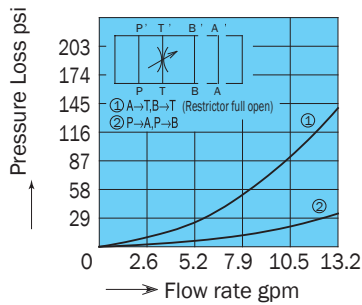


OCY-G01-P-20

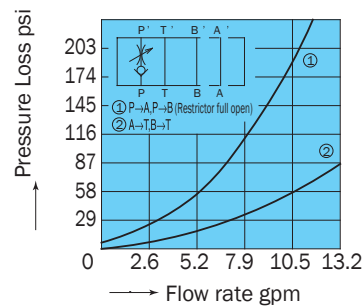


OCY-G01-W-Y-20
(OCY-G01-W-X-20)

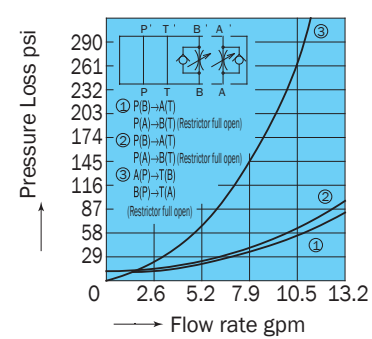


OCY-G03-P-J50

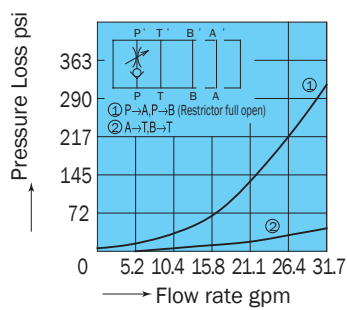


OCY-G03-W-Y-J51
(OCY-G03-W-X-J51)

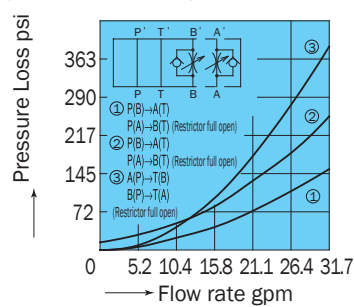

OYH-G04-P-10

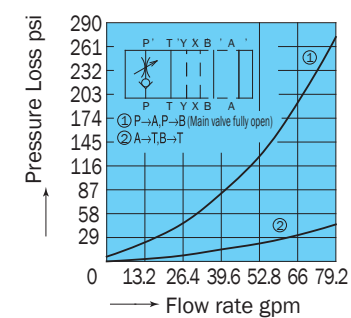


OYH-G04-W-Y-10
(OYH-G04-W-X-10)

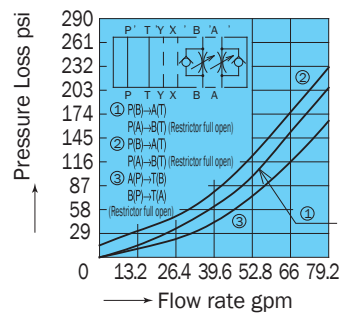


Stroke -- Flow Rate Characteristics


OY-G01-T-20

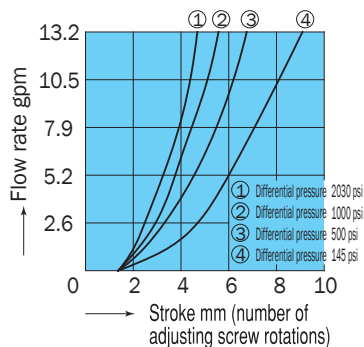


OCY-G01-P-20

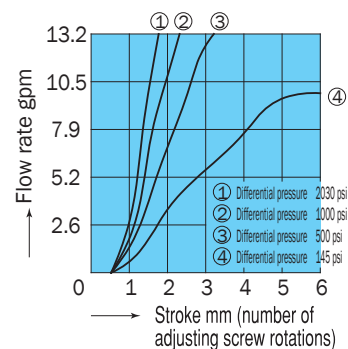


OCY-G01-*-20

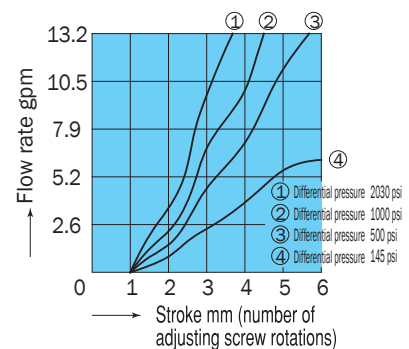


OCY-G03-P-(H)-J50

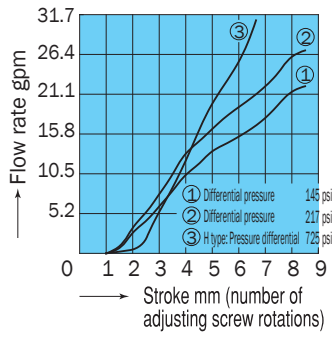


OCY-G03-W-(H)Y-J51

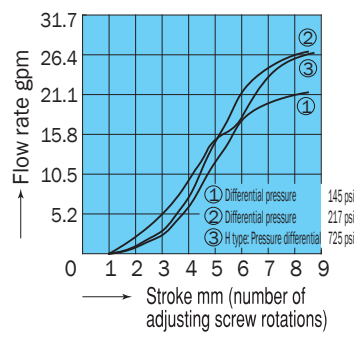

OYH-G04-P-10

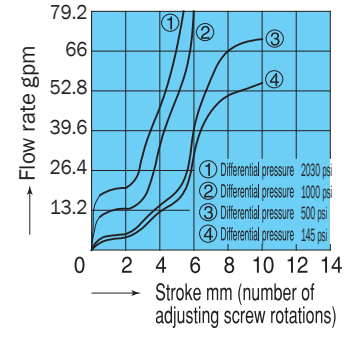


OYH-G04-W-Y-10

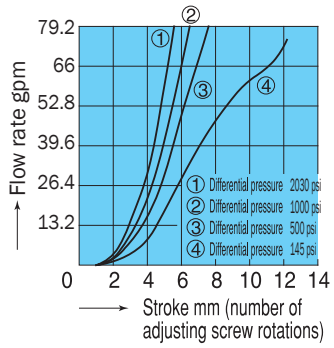

Cross-sectional Drawing

OY-G01-T-20

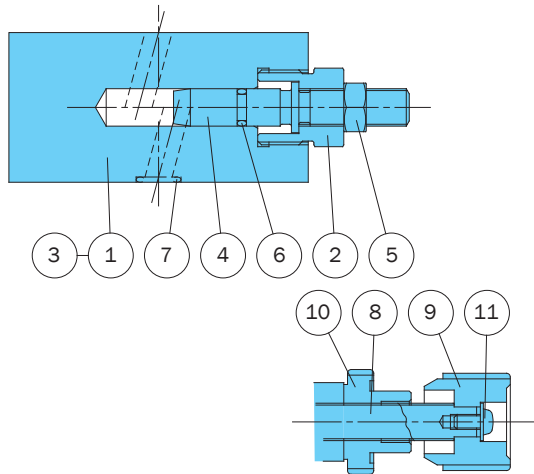


Part No.	Part Name
1	Body
2	Retainer
3	Plate
4	Screw
5	Nut
6	O-ring
7	O-ring
8	Screw
9	Knob
10	Nut
11	Screw

Seal Part List (Kit Model Number BFBS-01YT)

Part No.	Part Name	Part Number	Q'ty
			T
6	O-ring	1B-P7	1
7	O-ring	1B-P9	4

Note: O-ring 1A/B-** refers to JIS B2401-1A/B.

OCY-G01-P-20

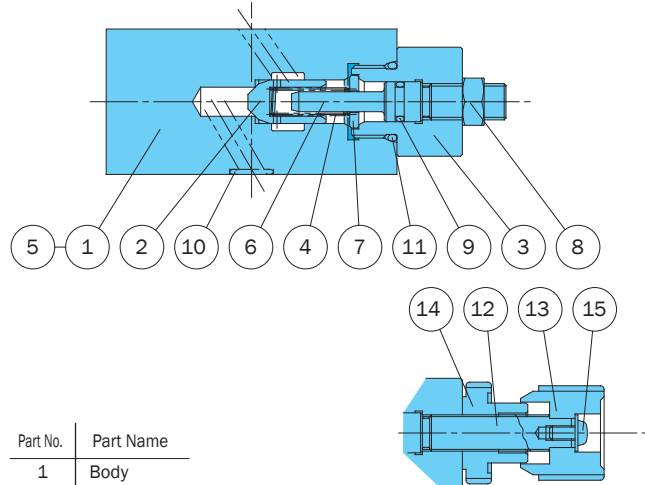


Part No.	Part Name
1	Body
2	Throttle
3	Retainer
4	Spring
5	Plate
6	Screw
7	Ring
8	Nut
9	O-ring
10	O-ring
11	O-ring
12	Screw
13	Knob
14	Nut
15	Screw

Seal Part List (Kit Model Number BFBS-01CYP)

Part No.	Part Name	Part Number	Q'ty
			T
9	O-ring	1B-P8	1
10	O-ring	1B-P9	4
11	O-ring	1B-P18	1

Note: O-ring 1A/B-** refers to JIS B2401-1A/B.

OCY-G01-A-Y-20

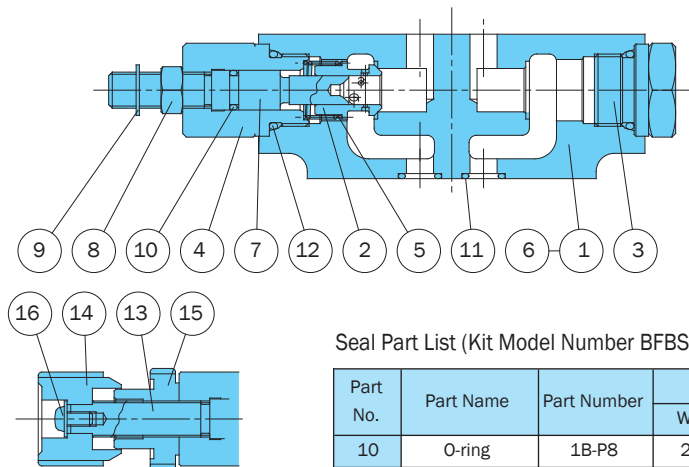


Seal Part List (Kit Model Number BFBS-01CY*)

Part No.	Part Name	Part Number	Q'ty		
			W	A	B
10	O-ring	1B-P8	2	1	1
11	O-ring	1B-P9	4	4	4
12	O-ring	1B-P18	2	2	2

Note: 1. O-ring 1A/B-** refers to JIS B2401-1A/B.
2. Specify W, A, or B for the asterisk (*) in the kit model number.

Part No.	Part Name
1	Body
2	Throttle
3	Bushing
4	Retainer
5	Spring
6	Plate
7	Screw
8	Nut
9	E-ring
10	O-ring
11	O-ring
12	O-ring
13	Screw
14	Knob
15	Nut
16	Screw

OCY-G03-P-J50

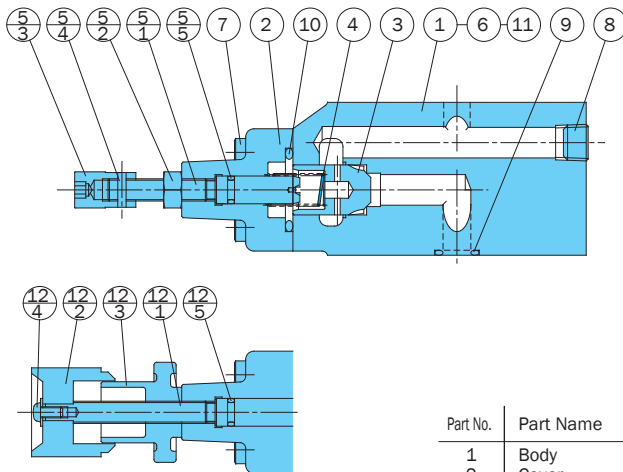


Seal Part List (Kit Model Number BFES-03CYP)

Part No.	Part Name	Part Number	Q'ty
5(12)-s	O-ring	1B-P7	1
9	O-ring	AS568-014(Hs90)	5
10	O-ring	1B-P24	1

Note: O-ring 1A/B-** refers to JIS B2401-1A/B.

Part No.	Part Name
1	Body
2	Cover
3	Throttle
4	Spring
5	Screw kit
5 ₁	Screw
5 ₂	Nut
5 ₃	Nut
5 ₄	Pin
5 ₅	O-ring
6	Plate
7	Screw
8	Plug
9	O-ring
10	O-ring
11	Pin
12	Handle kit
12 ₁	Screw
12 ₂	Knob
12 ₃	Nut
12 ₄	Screw
12 ₅	O-ring

OCY-G03-A-Y-J51

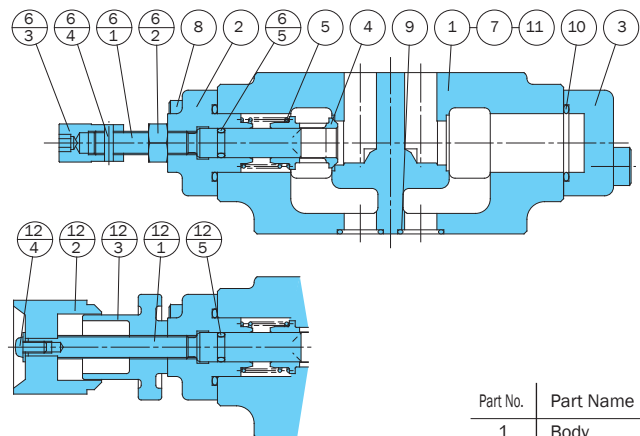


Seal Part List (Kit Model Number BFES-03CY*)

Part No.	Part Name	Part Number	Q'ty		
			W	A	B
6(12)-s	O-ring	1B-P7	2	1	1
9	O-ring	AS568-014(Hs90)	5	5	5
10	O-ring	1B-P22	2	2	2

Note: 1. O-ring 1A/B-** refers to JIS B2401-1A/B.
2. Specify W, A, or B for the asterisk (*) in the kit model number.

Part No.	Part Name
1	Body
2	Cover
3	Cover
4	Throttle
5	Spring
6	Screw kit
6 ₁	Screw
6 ₂	Nut
6 ₃	Nut
6 ₄	Pin
6 ₅	O-ring
7	Plate
8	Screw
9	O-ring
10	O-ring
11	Pin
12	Handle kit
12 ₁	Screw
12 ₂	Knob
12 ₃	Nut
12 ₄	Screw
12 ₅	O-ring

OYH-G04-P-10

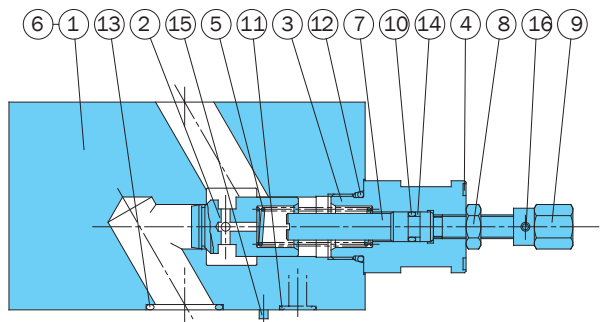

Seal Part List


(Kit Model Number BFKS-04CYP)

Part No.	Part Name	Part Number	Q'ty
			P
10	O-ring	1B-P7	1
11	O-ring	AS568-012(Hs90)	2
12	O-ring	1B-P20	1
13	O-ring	AS568-118(Hs90)	4
14	Backup ring	T2-P7	1

Note: 1. O-ring 1A/B-** refers to JIS B2401-1A/B.
2. Backup ring indicates JIS B 2407-T2-**.

Part No.	Part Name
1	Body
2	Throttle
3	Retainer
4	Plate
5	Spring
6	Plate
7	Screw
8	Nut
9	Nut
10	O-ring
11	O-ring
12	O-ring
13	O-ring
14	Backup ring
15	Pin
16	Pin

OYH-G04-A-Y-10

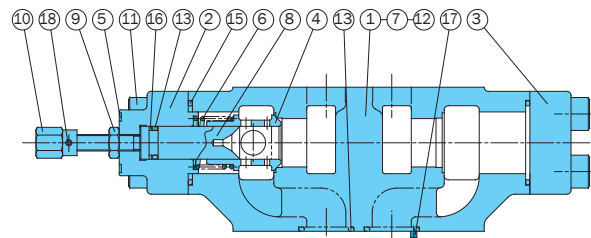

Seal Part List

(Kit Model Number BFKS-04CY*)

Part No.	Part Name	Part Number	Q'ty		
			W	A	B
12	O-ring	AS568-012 (Hs90)	2	2	2
13	O-ring	1A-P12	2	1	1
14	O-ring	AS568-118 (Hs90)	4	4	4
15	O-ring	AS568-127 (Hs90)	2	2	2
16	Backup ring	T2-P12	2	1	1

Note: 1. O-ring 1A/B-** refers to JIS B2401-1A/B.
2. Backup ring indicates JIS B 2407-T2-**.
3. Specify W, A, or B for the asterisk (*) in the kit model number.

Part No.	Part Name
1	Body
2	Cover
3	Cover
4	Throttle
5	Plate
6	Spring
7	Plate
8	Screw
9	Nut
10	Nut
11	Screw
12	O-ring
13	O-ring
14	O-ring
15	O-ring
16	Backup ring
17	Pin
18	Pin